



SERIE328

Feststellwirkung erhöhen=
Stufenweises Drehen
gegen den Uhrzeigersinn


Feststellwirkung vermindern=
Stufenweises Drehen
in Richtung des Uhrzeigersinn



SERIE828

Feststellwirkung erhöhen=
Stufenweises Drehen
in Richtung des Uhrzeigersinn

Feststellwirkung vermindern=
Stufenweises Drehen
gegen des Uhrzeigersinn

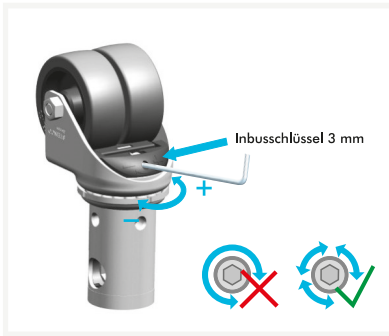

Radfeststellung

Lieferzustand (▶)



Die Bremsfunktion der STEINCO Rollen wird im Werk voreingestellt. Nach längerem Gebrauch und der nachlassenden Bremswirkung oder bei Bedarf der Feinjustierung während der Montage besteht die Möglichkeit, die Bremse nachzustellen.

Eine fehlerhafte Nachstellung kann Schäden an Rolle und Gerät verursachen.






SERIES328

Locking=
Stepwise turning **counterclockwise**

Unlocking=
Stepwise turning **clockwise**

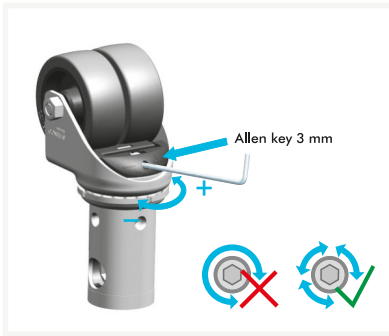

SERIES828

Locking=
Stepwise turning **clockwise**

Unlocking=
Stepwise turning **counterclockwise**



Wheel lock

Delivery conditions (▶)

	Wheel lock
	Neutral/ neutral position
	Wheel lock



The brake function of STEINCO castors is preset at the factory. It is possible to readjust the brake after prolonged use and when the braking effect has diminished or if fine adjustment is required during installation.

Incorrect adjustment can cause damage to the castor and the equipment.

